

SmartBoard - Settings > Axle load calibration

Key	Description	Description	Key
1	Without function	Without function	4
2	Without function	Without function	5
3	Reset calibration	Start calibration	6
Home	Back to the main menu	Without function	Next



Run axle load calibration

Calibrate axle loads in empty, partially loaded and loaded state.

1. Select *Start calibration*.
2. Read and follow the instructions on the screen.
3. Press Next (key 6).
 - ⇒ The screen for selecting the load status is displayed.

SmartBoard - Settings > Axle load calibration

Key	Description	Description	Key
1	Without function	Calibrate as loaded	4
2	Without function	Calibrate as partially loaded	5
3	Without function	Calibrate as empty	6
Home	Back to axle load calibration	Without function	Next



4. Select the load status you want to calibrate.
 - ⇒ The screen for entering the measured value is displayed.

SmartBoard - Settings > Axle load calibration

Key	Description	Description	Key
1	Select left	Select right	4
2	Decrease value	Increase value	5
3	Save and back	Without function	6
Home	Back to axle load calibration	Without function	Next

